

Baggage Scale

Baggage scales (SD devices) treated as AEA devices

Document Number AEA8_01.DOC

Last update: 26. April 2011



Copyright© AEA/TS 2011

Abstract

BAGGAGE SCALES

Baggage Scales (Scale device) treated as AEA devices

Revised:	28 th November	2009	Rev.1	Initial draft with ES, EP, AV, RI, RC, PV, SQ added
	3 rd December	2009	Rev.2	SW, SWOK, ERRW added, SQNI updated, EP updated
	9 th December	2009	Rev.2.1	Wording changes, 5.2.4 deleted as duplicate
	21 st December	2009	Rev.2.2	SO/SOOK changed to SA/SAOK, added k and J as fonts, updated chapter structure, updated RCO, fixed typos (BGR), BSW mode not for fonts is in RCOK not RIOK, added AV, MG and PV, changed values for metric and pounds,
	22 nd December	2009	Rev. 2.3	Details of Methods added, typos corrected
	30. January	2011	Rev. 2.4	SQOK, SQNI & ERRW updated with new states 5&6 and support for payment transaction, ref table added for SQNI, RCOK with #A enhanced, EP params UNSOL/BSTMODE updated,
	2 nd February	2011	Rev. 2.5	SA updated, SX added, BS renamed to SD device, ERRW updated with new states, calibration & adjustment explained, alibi mechanism explained
	9 th February	2011	Rev.2.6	EP#RESET added, BSP added for AVOK/RIOK
	26 th April	2011	Rev.2.7	Added Note4 under EP for BSPRECIS

This document has been produced by the AEA Technical Group (ATG):
AIR FRANCE, BRITISH AIRWAYS, KLM, SAS, LUFTHANSA, SWISS AND BRUSSELS Airlines

Table of Contents

1. Introduction	1
2. Method.....	2
2.1. Alibi number for payment transactions	2
2.2. Environment handling for Baggage Scales	3
2.2.1. “Baggage Scale” status request for current values.....	4
2.2.2. Example of a full response on a baggage scale Environment status request.....	4
2.2.3. Example of a full response on a baggage scale Environment status request (with AIRLINEID)	4
2.2.4. “Baggage scale Environment” change request.....	5
2.2.5. Example of a full response on a baggage scale Environment change request	5
2.2.6. Example of a full response on a baggage scale Environment change request (with AIRLINEID)	5
2.2.7. Example 1: error response to a baggage scale Environment change request (invalid keyword)	5
2.2.8. Example 2: error response to a baggage scale Environment change request (invalid content in keyword).....	5
2.2.9. Example 3: error response to a baggage scale Environment change request (invalid content in multiple keywords).....	6
2.2.10. “Baggage scale Environment” reset request	6
2.2.11. “Baggage scale Environment” response to a reset request.....	6
3. Request Configuration (RC).....	7
3.1. Example of message read baggage scale configuration - RC.....	7
3.2. Example of message baggage scale configuration response - RCOK.....	7
4. Device information (RI)	8
4.1. Example of message Device information request - RI.....	8
4.2. Example of message Device information response - RIOK.....	8
4.2.1. Example 1 of message device information response.....	9
5. Status request (solicited and unsolicited) (SQ - SQNI)	10
5.1. Example of message Status request - SQ	10
5.2. Example1 of SQOK message (status from Scale Device) - SQOK	10
5.3. Example of message Status request for new Alibi number - SQ.....	10
5.4. Example2 of SQOK message (status from Scale Device) - SQOK	10
5.5. Example of message scale new Alibi number request not ok - ERRW	10
5.6. Example of message 69 (unsolicited status from BS) - SQNI	11
6. Scale activate request (SA).....	13
6.1. Example of message scale activate request - SA.....	13
6.2. Example of message scales activated ok - SAOK.....	13
7. Scale reset request (SX).....	14
7.1. Example of message scale reset request - SX	14
7.2. Example of message scale reset ok - SXOK	14
7.3. Example of message scale reset not ok - ERRW	14
8. Scale deactivate request (SC)	15
8.1. Example of message scales deactivate request - SC	15
8.2. Example of message scale deactivated ok - SCOK.....	15
9. Scale trigger send weight request (SW)	16
9.1. Example of message scale trigger send weight request - SW	16
9.2. Example1 of message scale weight response ok - SWOK.....	16
9.3. Example2 of message scale weight response ok - SWOK.....	16
9.4. Example1 of message trigger scale weight error response - ERRW	16
9.5. Example2 of message trigger scale weight error response - ERRW	17
10. Illogical command (ERR2).....	18
10.1. Example of message illogical command – ERR2	18

SCALE Devices (baggage scale)

11. Device Display Message (MG)	19
11.1. Example of message 44 (Agent display message command).....	19
11.2. Example of message 46 (display message processed)	19
12. Receipt printer handling for Baggage scale.....	20
12.1. Output example (receipt document)	21
12.2. Receipt print handling RPMODE=RD	22
12.2.1. Receipt print message from host to Baggage scale with Receipt Printer facility	22
12.2.2. Receipt printed OK message from Baggage Scale device with Receipt Printer facility	22
12.2.3. Receipt not printed message from Baggage Scale device with Receipt Printer facility	22
13. AEA version request (AV)	23
13.1. Example of a response on an AEA version request	23
14. Program version request (PV)	24
14.1. Example of the PROGRAM-version request - PV	24
14.2. Example of a response on a program version request - PVOK	24
Annex A : Summary of baggage scale Messages.....	25